


Supplementary Protectors / Miniature Circuit Breakers Dimensions


Supplementary protectors / miniature circuit breakers

FAZ

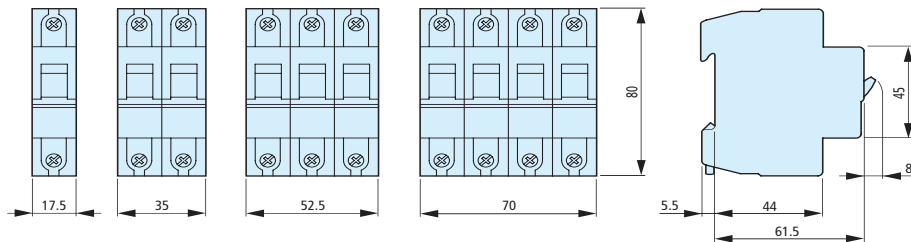


(Trip-indicating) auxiliary contacts

FAZ-XHI11
FAZ-XAM002

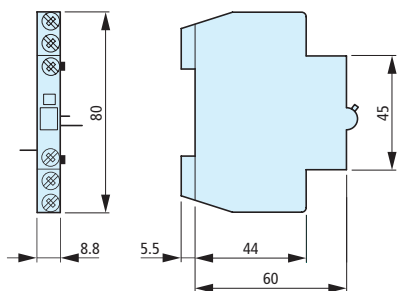


Undervoltage trip

FAZ-XUA

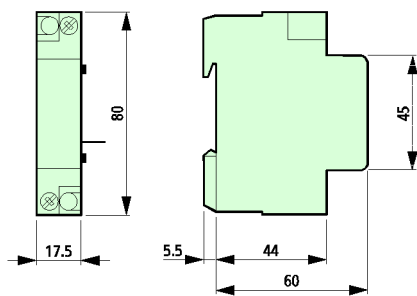


Shunt trip

FAZ-XAA

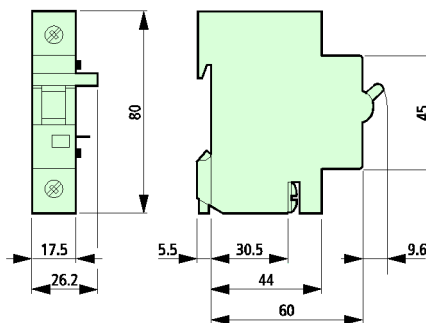

Feeder bus connectors

FAZ-XIS



Connectors without auxiliary contact spacing

Typ	a	b	b1	c
FAZ-XIS1/2	30	27	14	3,5
FAZ-XIS1/6	104	27	14	3,5
FAZ-XIS1/12	207	27	14	3,5
FAZ-XIS2/4	65	27	14	6,3
FAZ-XIS2/6	104	27	14	6,3
FAZ-XIS2/12	207	27	14	6,3
FAZ-XIS3/6	104	27	14	9
FAZ-XIS3/12	206	27	14	9
FAZ-XIS4/8	141	27	14	11,8
FAZ-XIS4/12	207	27	14	11,8

Connectors with auxiliary contact spacing

Typ	a	b	b1	c
FAZ-XIS1/2-HI	53	27	14	3,5
FAZ-XIS1/6-HI	155	27	14	3,5
FAZ-XIS1/9-HI	228	27	14	3,5
FAZ-XIS2/4-HI	73	27	14	6,3
FAZ-XIS2/6-HI	120	27	14	6,3
FAZ-XIS2/10-HI	207	27	14	6,3
FAZ-XIS3/6-HI	120	27	14	10,7
FAZ-XIS3/12-HI	236	27	14	10,7
FAZ-XIS31/6-HI	155	27	14	10,7
FAZ-XIS31/8-HI	207	27	14	10,7
FAZ-XIS31/9-HI	236	27	14	10,7